

## ROCAM 4 Plus



DE Bedienungsanleitung  
EN Instructions for use  
FR Instruction d'utilisation  
ES Instrucciones de uso  
IT Istruzioni d'uso  
NL Gebruiksaanwijzing  
DA Brugsanvisning  
SV Bruksanvisning  
FI Käyttöohje

PL Instrukcja obsługi  
CS Návod k používání  
TR Kullanım kılavuzu  
HU Kezelési útmutató  
ET Kasutusjuhend läbi  
LT Naudojimo instrukcija  
LV Lietošanas pamācība  
RU Инструкция по использованию  
JA マニュアル





# A Overview

no. 1200001911- basic




# B Replace the reel

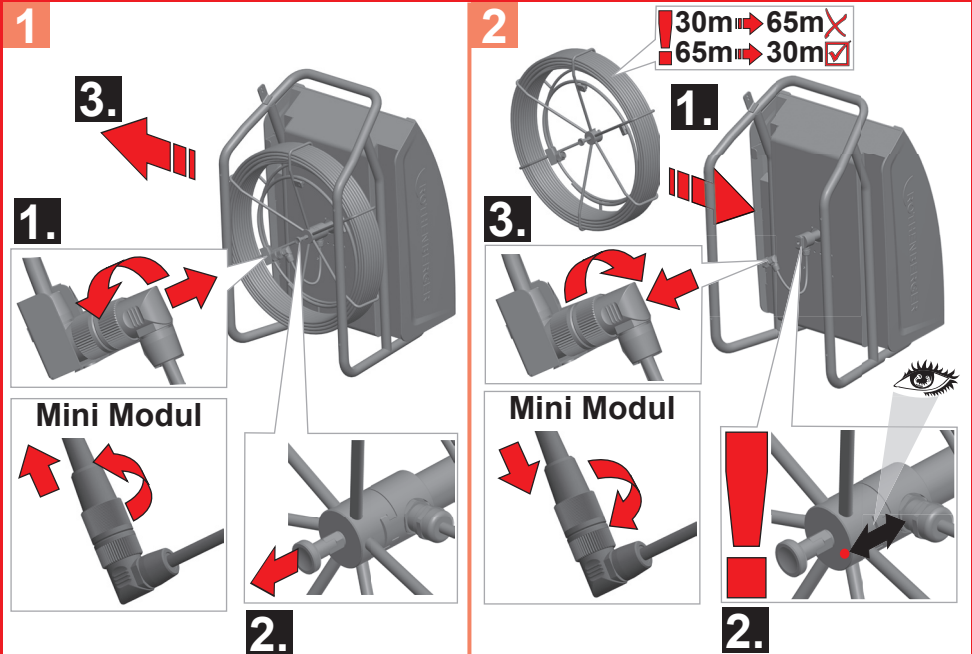

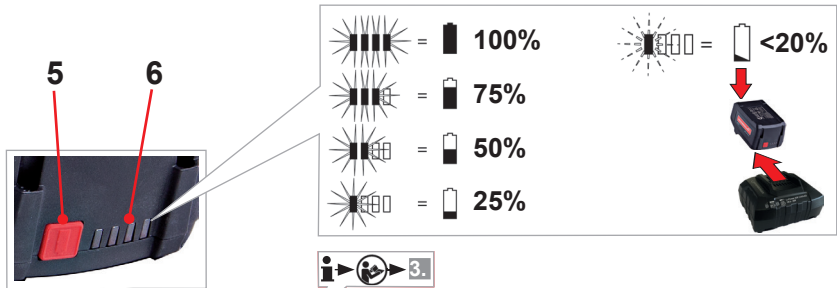

| Battery   | art. no.   | U    | C      | W     | Ic  | t      |
|-----------|------------|------|--------|-------|-----|--------|
| RO BP18/2 | 1000001652 | 18 V | 2,0 Ah | 400 g | 3 A | 40 min |
| RO BP18/4 | 1000001653 | 18 V | 4,0 Ah | 670 g | 3 A | 80 min |

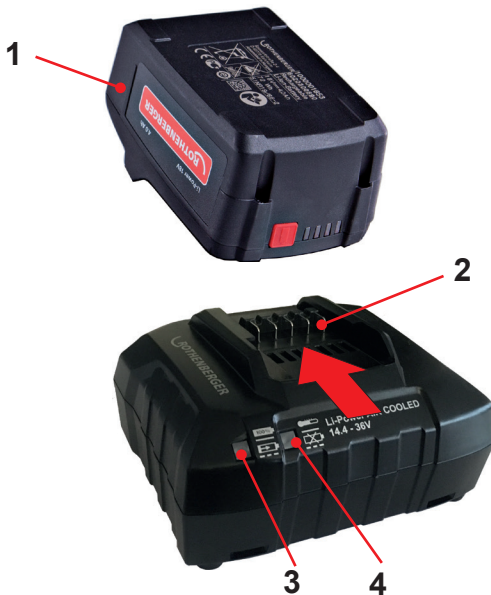

| Charger            | art. no.   | U1         | f1        | P1  | U2       | I2       | Nc     | W    |
|--------------------|------------|------------|-----------|-----|----------|----------|--------|------|
| RO BC14/36 EU      | 1000001654 | 220 - 240V | 50 - 60Hz | 85W | 14 - 42V | 3,0 A DC | 4 - 10 | 600g |
| RO BC14/36 AUS     | 1000001655 | 220 - 240V | 50 - 60Hz | 85W | 14 - 42V | 3,0 A DC | 4 - 10 | 600g |
| RO BC14/36 USA CND | 1000001656 | 115V       | 50 - 60Hz | 85W | 14 - 42V | 3,0 A DC | 4 - 10 | 600g |
| RO BC14/36 UK      | 1000001691 | 220 - 240V | 50 - 60Hz | 85W | 14 - 42V | 3,0 A DC | 4 - 10 | 600g |
| RO BC14/36 JP      | 1000003033 | 100V       | 50 - 60Hz | 85W | 14 - 42V | 3,0 A DC | 4 - 10 | 600g |

fig. charger and battery similar